


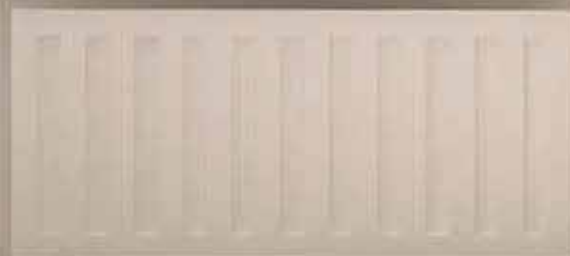





ED17910



ED17747

















ED17865




















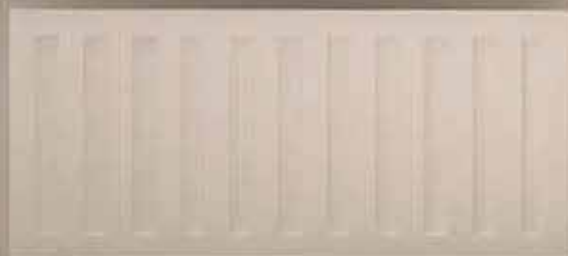


















ED17864

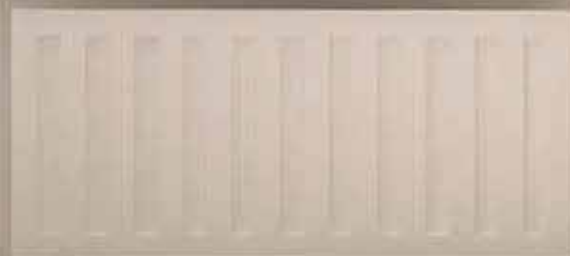











































ED17916















































ED17912


















































MEASUREMENT


INSIDE MOUNTING If the customer wishes to have an **inside installation** then uses the following measurement method.

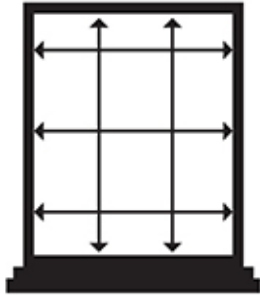

1. Measure the width of the window from at least three places and Use the **SMALLEST** dimension out of the three.

2. Measure the height of the window from inside top of opening to the sill from two places and use smaller measurement.

OUTSIDE MOUNTING If the customer wishes to have an **outside installation** then uses the following method of measuring:

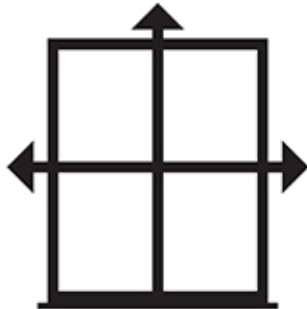

1. Measure the exact width you wish to cover. Be sure to overlap the window frame a minimum of 50mm (2 inches) on each side.

2. Measure height from top of frame to sill or 50mm (2 inches) below opening if there is no sill.

NOTE: Roller blind fabric is short by 30mm than the head rail at the control unit side and 5mm short at the idler side in width. So always make sure that in this case there is always frame, which takes care of side gaps.

FABRIC SPECIFICATION

Fabric Name : **Eco foam Blackout**

Weight (GSM) : 330(± 10%g/m²)

Composition : 42% Polyester, 58% Acrylic

Thickness : 450 Micron (±10%)

Maximum Width : 300cm

Light Fastness : 4 grade

Weft Deviation : ≤2%

Blackout Rate : 100%

Yarn Count : Wrap 30/cm weft 14/cm

Cleaning : Conditionally cleaning with vacuum cleaner or wet cloth.